

Congratulations—and thank you—for choosing EDGE Gear.

Your EDGE Dive Light is covered by the EDGE One Year Warranty against defects in materials or workmanship. This warranty is only extended to the original purchaser and is not transferable. For more information, be sure to read the warranty section of this manual, and remember to save your sales receipts. Copies of these receipts must be presented whenever obtaining warranty service.

Perhaps more than any other piece of diving equipment you will own, your dive lights function and performance relies greatly on the care and maintenance it receives.

Before you dive with your new EDGE light, it is important to read this manual in its entirety to become familiar with its features, as well as the correct procedures for setup, pre-dive inspection, and post-dive maintenance.

In this manual; Warnings, Cautions and Notes calls your attention to information provided to help ensure your safety. Always dive safely.

A WARNING indicates a procedure or situation that, if not avoided, could result in serious injury or death to the user

A CAUTION indicates any situation or technique that could cause damage to the product and could subsequently result in injury to the user.

A NOTE is used to emphasize important points, tips, and reminders.

WARNING: This manual provides essential instructions for the proper setup, inspection, use, and care of your new dive light. It is very important to take the time to read these instructions in order to understand and fully enjoy the features that are unique to your specific model. Improper use of could result in serious injury or death.

NOTE: Some features featured in this manual may not exist on your specific dive light. Disregard instructions about features that do not apply to your light.

Edge DL SERIES:

Edge-Hog Dive Gear moves to the head of the pack in underwater illumination with the introduction of these dive lights. Technical diving is where we began and we've introduced many innovations in this sport. Our DL SERIES lights are equipped with the latest High Power CREE LEDs. The various lights can produce between 230 and 1100 lumens of excellent illumination.

The DL-3 a small 315 lumen light has a machined aluminum body with push button on/off switch. It weighs aprox. 5oz. with batteries comes with a wrist lanyard and uses two CR123 type batteries.

The DL 9 and 19 Series units use simple twist-on/twist off activation backed by double-O-ring seals. They all have strategically placed knurling to improve grip and makes twist activation very easy.



The DL-9 a 1000 lumen light weighs in at slightly over 16oz. with batteries and has a Shock-proof rubberized protection over the entire body that provides a non-slip surface. It is powered by 3 standard C-size batteries with 20+ hour burn time.

The DL-13 a 1100 lumen light measures 40x29x133mm, weighs approx. 10oz. and has a 3 power mode switch allowing you to increase burn time if you don't need full power.

The DL-19 a 1100 lumen light measures 44x32x135mm and weighs approx. 9oz. with battery and lanyard.

The DL-13 and 19 are machined from durable aluminum and are compact lights that can be stowed in a BC pocket or clipped to a d-ring. These two lights provide excellent light to look under ledges or in holes during the day.

- With excellent light intensity they offer a full day or night of diving and recharge quickly. They are leaders in their price range and rated to a maximum depth of 300ft/100m.
- Both come equipped with a wrist lanyard.
- These rugged lights feature a high intensity XML U4 LED and use the popular 18650 rechargeable battery.
- Both have approximately 3.5 hours of burn time (depending the specific battery rating).
- Waterproof rated to a depth of 100 meters / 330 feet.
- Approx. lifetime of bulb 50,000 hours
- *Lux output is measured when switching on with a fully charged battery or new set of fresh alkaline batteries. Measurements are average values and may vary +/- 15% depending on the type batteries used.

INSTRUCTIONS:

DL-19:

- To turn ON turn the light head counter clock-wise and the light body clock-wise until it is finger-tight and the light turns on. Do not over tighten the casing as this could cause damage to the O-rings.
- Never Use A Tool Of Any Kind To Tighten The Case*
- To turn OFF the light slowly turn the light head clock-wise until the light turns off. When the light goes off, DO NOT UN-SCREW THE CASING ANY FURTHER.

WARNING!!! If the casing is unscrewed too far, flooding may result and this is not covered by warranty.

DL-13:

• To turn ON push the red switch forward. Continue to push and release the switch to reduce power and turn OFF the light. Do not use excessive force on the switch.

WARNING !!!!!!

Do not look directly into the light, or direct the light into the eyes of others.

Do not alter or modify any Edge-Hog dive light. If a light is modified the warranty will be void.



NOTES:

Battery selection: Use only high quality batteries. Low quality batteries can cause off-gassing and damage to the internal electronics.

Replacing batteries: Ensure there is a light coat of lubricant on the O-rings. Ensure batteries are properly orientated when placed in light, damage to the light may occur if improperly installed.

Storage: For protection remove batteries to avoid damage to the light from leakage.

Proper maintenance: Frequent use of the dive light may cause O-rings to dry out. To avoid flooding, regularly clean the O-rings grooves with a cotton swab and apply lubricant to O-rings to prevent cracking. Rinse all lights with fresh water before storing.

Environmental protection / disposal instructions: Dispose of this product only at a specific collection point for electrical refuse. Batteries should not go in household garbage! Only dispose of batteries and/or dive lights at appropriate collection facilities.

Warranty: All warranty claims must be returned with dated proof-of-purchase to an Authorized Edge-Hog Dealer. Visit Edge-Gear.com for a dealer near you.

Warranty does not cover:

- Loss or defects, damage or deterioration due to normal use or wear and tear.
- Damage caused by exposure to excessive heat, prolonged sunlight or corrosive chemicals.
- Damage due to poor maintenance, improper use, alteration, negligence / accident or repair by someone other than Edge Gear.

National Service Center EDGE US Warehouse,

5208 Mercer Uni	versity Dr.Macon, GA. 31210	Phone: 478-477-9131	Email: sales@edge-gear.com
It is recommended t before, during and a	hat you staple a copy of the sales after use.	receipt to this page and ke	ep this manual for reference
Name (First MI Last)			
Home Address			
City	State	Zip Code	
Receipt #	Date of Purchase (mm/dd/Yr)	Product Name	e